

Your Vantage Pro2™ has an


IMPROVED ANEMOMETER

Your Vantage Pro2 Integrated Sensor Suite includes an improved anemometer. It now has a greater operating range of wind speeds, from less than 1 mph to over 220 mph (1 - 173 kts; 0.5 - 89 m/s; 1 - 322 kph). It will provide even greater durability in the field, and provide the same accurate data Davis weather stations are known for.

The new anemometer control head looks different from the old one. To avoid confusion, please refer to these instructions and illustrations, rather than the ones in your Vantage Pro2 ISS Installation manual.

Page 1: Components

The new housing has a different shape. Refer to this illustration of the ISS components:

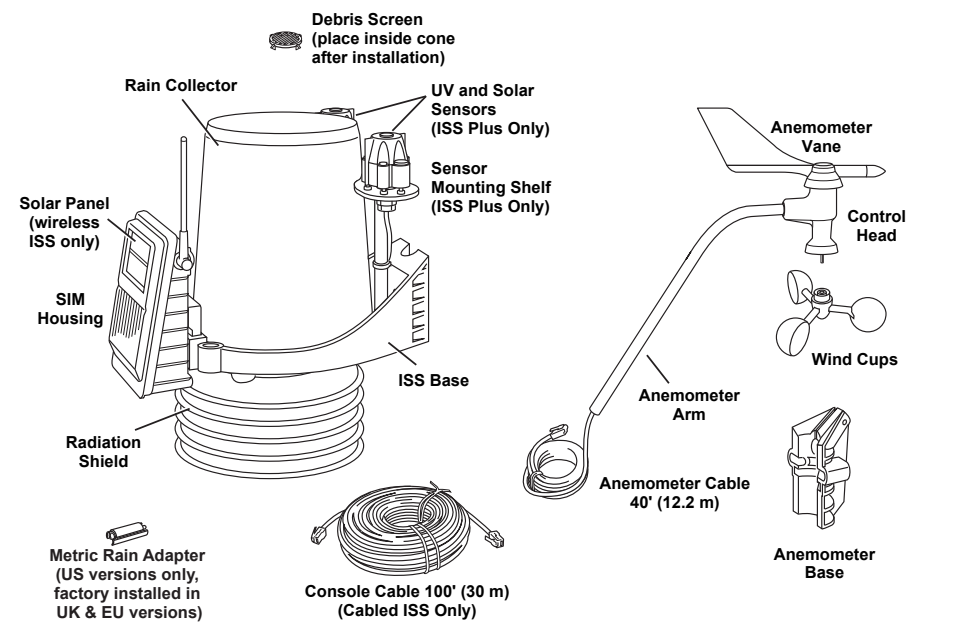


Page 3:

In the list of parts, ignore the “drip ring.” It is now molded into the housing.

Page 4:

Refer to this illustration when attaching the wind cups.

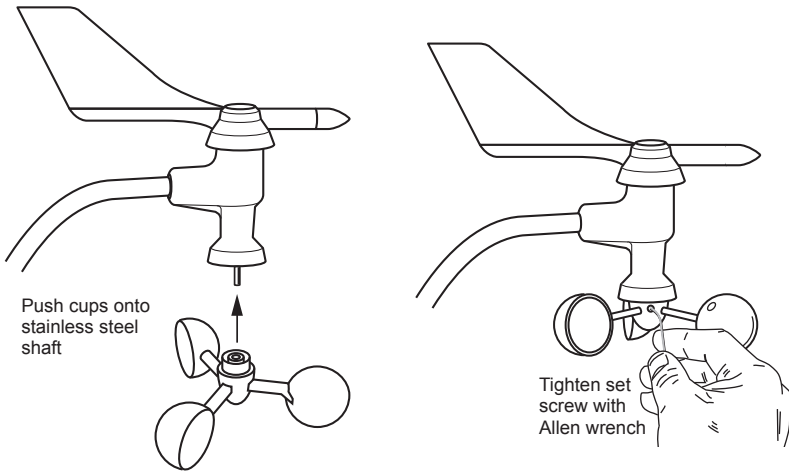

Attaching the Wind Cups

DAVIS  [®]
Davis Instruments

3465 Diablo Avenue, Hayward, CA 94545-2778 U.S.A.

510-732-9229 • Fax: 510-732-9188

E-mail: info@davisnet.com • www.davisnet.com

Document No. 07395.273 Rev A February 6, 2013

©2013 Davis Instruments Corp. All rights reserved.

Vantage Pro is a registered trademark of Davis Instruments Corp. Hayward, CA.